# Alienware m15 R7 Setup and Specifications

### Notes, cautions, and warnings

(i) NOTE: A NOTE indicates important information that helps you make better use of your product.		
CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.		
WARNING: A WARNING indicates a potential for property damage, personal injury, or death.		

© 2022-2023 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

# **Contents**

Chapter 1: Set up your Alienware m15 R7	4
Chapter 2: Views of Alienware m15 R7	5
Display	
Right	
Left	
Тор	
Back	
Bottom	
hapter 3: Specifications of Alienware m15 R7	9
Dimensions and weight	9
Processor	9
Chipset	9
Operating system	
Memory	
External ports	10
Internal slots	11
Communications	11
Audio	12
Storage	
Keyboard	
Camera	14
Touchpad	14
Power adapter	
Battery	15
Display	16
GPU—Integrated	17
GPU — Discrete	17
Operating and storage environment	17
hapter 4: Keyboard shortcuts of Alienware m15 R7	19
hapter 5: Low blue light	21
hapter 6: Alienware Command Center	22
hapter 7: Getting help and contacting Alienware	23

# Set up your Alienware m15 R7

(i) NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Connect the power adapter and press the power button.



### Views of Alienware m15 R7

# **Display**



#### 1. Left microphone

Provides digital sound input for audio recording and voice calls.

#### 2. RGB-infrared camera

This combined camera supports both infrared Windows Hello facial recognition and standard RGB imaging for photos and videos.

NOTE: Depending on the display configuration ordered your computer may ship with a HD RGB camera that enables you to video chat, capture photos, and record videos. For this configuration, the infrared emitters will not be featured in the camera module.


#### 3. Camera-status light

Turns on when the camera is in use.

#### 4. Right microphone

Provides digital sound input for audio recording and voice calls.

### Right



#### 1. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

#### 2. USB 3.2 Gen 1 port with PowerShare

Connect devices such as external storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

- NOTE: If your computer is turned off or in hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.
- NOTE: Certain USB devices may not charge when the computer is turned off or in sleep state. In such cases, turn on the computer to charge the device.

### Left



#### 1. Network port

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

#### 2. Universal audio jack

Connect headphones or a headset (headphone and microphone combo).

### Top



#### 1. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two fingers tap to right-click.

#### 2. Left-click button

Press to left-click.

#### 3. Right-click button

Press to right-click.

#### 4. Power button (Alien head)


Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer into sleep state if it is turned on.

When the computer is turned on, press and hold the power button for four seconds to force shut-down the computer.

- NOTE: You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at <a href="https://www.dell.com/support/manuals">www.dell.com/support/manuals</a>.
- NOTE: This computer supports AlienFX, which lets you choose from an array of color and transition effects across multiple zones on the computer, including the keyboard and power button. For more information, see <u>Alienware Command Center</u>.

### Back

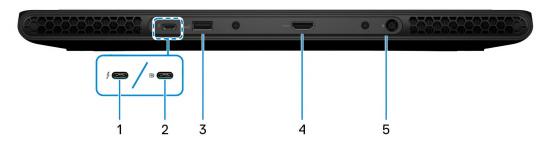

#### 1. Thunderbolt 4.0 port

Supports USB4, DisplayPort 1.4, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Provides data transfer rates of up to 40 Gbps for USB4 and Thunderbolt 4.

- (i) NOTE: This port is only available on computers shipped with a NVIDIA GeForce RTX 3060/3070 Ti/3080 Ti graphics card.
- (i) **NOTE:** A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.
- (i) **NOTE:** USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.
- (i) NOTE: Thunderbolt 4 supports two 4K displays or one 8K display.

### 2. USB 3.2 Gen 2 (Type-C) port with DisplayPort

Connect devices such as external storage devices, printers, and external displays. Provides data transfer rate of up to 10 Gbps. Supports DisplayPort 1.4 and also enables you to connect an external display using a display adapter.

- (i) **NOTE:** This port is only available on computers shipped with a NVIDIA GeForce RTX 3050 Ti graphics card.
- (i) NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

### 3. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

#### 4. HDMI 2.1 port

Connect to a TV, external display or another HDMI-in enabled device. Provides video and audio output.

#### 5. Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

### **Bottom**



### 1. Left speaker

Provides audio output.

### 2. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

### 3. Right speaker

Provides audio output.

# Specifications of Alienware m15 R7

# **Dimensions and weight**

The following table lists the height, width, depth, and weight of your Alienware m15 R7.

Table 1. Dimensions and weight

D	escription	Values
Height:		
	Front height	12.90 mm (0.51 in.)
	Rear height	20.60 mm (0.81 in.)
W	/idth	356.20 mm (14.02 in.)
D	epth	272.50 mm (10.73 in.)
	eight  NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.	<ul> <li>2.58 kg (5.69 lb), maximum weight for computers shipped with a 56 Wh battery</li> <li>2.69 kg (5.93 lb), maximum weight for computers shipped with a 86 Wh battery</li> </ul>

### **Processor**

The following table lists the details of the processors supported by your Alienware m15 R7.

Table 2. Processor

Description	Values	
Processor type	12 <sup>th</sup> Generation Intel Core i7-12700H	
Processor wattage	45 W	
Processor core count	14	
Processor thread count	20	
Processor speed	Up to 4.70 GHz	
Processor cache	24 MB	
Integrated graphics	Intel UHD Graphics	

### Chipset

The following table lists the details of the chipset supported by your Alienware m15 R7.

Table 3. Chipset

Description	Values
Chipset	ADL-P PCH

### Table 3. Chipset (continued)

Description	Values
Processor	12 <sup>th</sup> Generation Intel Core i7-12700H
DRAM bus width	64-bit
Flash EPROM	32 MB
PCIe bus	Up to Gen4

# **Operating system**

Your Alienware m15 R7 supports the following operating systems:

- Windows 11 Home, 64-bit
- Windows 11 Pro, 64-bit

# **Memory**

The following table lists the memory specifications of your Alienware m15 R7.

### **Table 4. Memory specifications**

Description	Values	
Memory slots	Two-SODIMM slots	
Memory type	DDR5	
Memory speed	4800 MHz	
Maximum memory configuration	64 GB	
Minimum memory configuration	8 GB	
Memory size per slot	8 GB, 16 GB, and 32 GB	
Memory configurations supported	<ul> <li>8 GB, 1 x 8 GB, DDR5, 4800 MHz</li> <li>16 GB, 2 x 8 GB, DDR5, 4800 MHz, dual-channel</li> <li>32 GB, 1 x 32 GB, DDR5, 4800 MHz</li> <li>32 GB, 2 x 16 GB, DDR5, 4800 MHz, dual-channel</li> <li>64 GB, 2 x 32 GB, DDR5, 4800 MHz, dual-channel</li> </ul>	

# **External ports**

The following table lists the external ports of your Alienware m15 R7.

Table 5. External ports

Description	Values	
Network port	One RJ45 port	
USB ports	<ul> <li>Two USB 3.2 Gen 1 ports</li> <li>One USB 3.2 Gen 1 port with PowerShare</li> </ul>	

Table 5. External ports (continued)

Description	Values	
	One Thunderbolt 4 port, for computers shipped with a NVIDIA GeForce RTX 3060/3070 Ti/3080 Ti graphics card     One USB 3.2 Gen 2 Type-C port with DisplayPort, for computers shipped with a NVIDIA GeForce RTX 3050 Ti graphics card	
Audio port	One universal audio jack	
Video port	One HDMI 2.1 port	
Media-card reader	Not supported	
Power-adapter port	One 7.40 mm x 5.10 mm DC-in	
Security-cable slot	Not supported	

### **Internal slots**

The following table lists the internal slots of your Alienware m15 R7.

Table 6. Internal slots

Description	Values
M.2	<ul> <li>One M.2 2230 slot for WiFi and Bluetooth combo card</li> <li>One M.2 2230/2280 slot for solid-state drive, for computers shipped with a NVIDIA GeForce RTX 3050 Ti graphics card</li> <li>Two M.2 2230/2280 slots for solid-state drive, for computers shipped with a NVIDIA GeForce RTX 3060/3070 Ti/3080 Ti graphics card</li> <li>NOTE: To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at www.dell.com/support.</li> </ul>

# **Communications**

### Ethernet

Table 7. Ethernet specifications

Description	Values	
Model number	Realtek RTL8111H-CG PCI-e Gigabit ethernet controller  Killer E3100G PCI-e Gigabit ethernet controller, only for computers shipped with a NVIDIA GeForce RTX 3060/3070 Ti/3080 Ti graphics card	
Transfer rate	10/100/1000/2500 Mbps	

### Wireless module

Table 8. Wireless module specifications

Description	Values	
Model number	Intel AX201	Intel Killer AX1675i
Transfer rate	Up to 2400 Mbps	Up to 2400 Mbps
Frequency bands supported	2.4 GHz/5 GHz	2.4 GHz/5 GHz/6 GHz
Wireless standards	<ul> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6 (WiFi 802.11ax)</li> </ul>	<ul> <li>WiFi 802.11a/b/g</li> <li>Wi-Fi 4 (WiFi 802.11n)</li> <li>Wi-Fi 5 (WiFi 802.11ac)</li> <li>Wi-Fi 6E (WiFi 802.11ax)</li> <li>NOTE: The WLAN configuration above is available in certain regions and with certain product configurations only.</li> </ul>
Encryption	64-bit/128-bit WEP     AES-CCMP     TKIP	64-bit/128-bit WEP     AES-CCMP     TKIP
Bluetooth	Bluetooth 5.2	Bluetooth 5.2

### **Audio**

The following table lists the audio specifications of your Alienware m15 R7.

Table 9. Audio specifications

Description		Values	
Audio controller		Realtek ALC3254	
Stereo conversion		Supported	
Internal audio interface		High definition audio interface	
External audio interface		One universal audio jack One HDMI 2.1 port	
Number of speakers		2	
Internal-speaker amplif	ier	Supported	
External volume contro	ls	Keyboard shortcut controls	
Speaker output:			
	Average speaker output	2 W	
Peak speaker output		2.5 W	
Subwoofer output		Not supported	
Microphone		Digital-array microphones in camera assembly	

### **Storage**

This section lists the storage options on your Alienware m15 R7.

Your Alienware m15 R7 supports one of the following storage configurations:

- One M.2 2230/2280 slot for solid-state drive, for computers shipped with a NVIDIA GeForce RTX 3050 Ti graphics card
- Two M.2 2230/2280 slots for solid-state drives, for computers shipped with a NVIDIA GeForce RTX 3060/3070 Ti/3080 Ti
  graphics card

The primary drive of your Alienware m15 R7 varies with the storage configuration. The primary drive of your computer is the M.2 drive where the operating system is installed.

#### Table 10. Storage specifications

Storage type	Interface type	Capacity
M.2 2230 solid-state drive	PCle Gen4 x4 NVMe, up to 64 Gbps	Up to 256 GB
M.2 2280 solid-state drive	PCle Gen4 x4 NVMe, up to 64 Gbps	Up to 4 TB

### Keyboard

The following table lists the keyboard specifications of your Alienware m15 R7.

#### Table 11. Keyboard specifications

Description	Values
Keyboard type	1-zone RGB     RGB per key     RGB per key, backlit Cherry mechanical keyboard
Keyboard layout	QWERTY
Number of keys	<ul><li>United States and Canada: 85 keys</li><li>United Kingdom: 86 keys</li><li>Japan: 89 keys</li></ul>
Keyboard size	X=19.05 mm key pitch Y=19.05 mm key pitch
Keyboard shortcuts	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.  (i) NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in BIOS setup program.  For more information, see Keyboard shortcuts.

### Camera

The following table lists the camera specifications of your Alienware m15 R7.

**Table 12. Camera specifications** 

Description	Values
Number of cameras	One
Camera type	<ul> <li>One HD RGB camera, for computers shipped with a 165 Hz display</li> <li>One HD RGB-Infrared camera, for computers shipped with a 240 Hz or 360 Hz display</li> </ul>
Camera location	Front
Camera sensor type	CMOS sensor technology
Camera resolution:	
Still image	0.92 megapixel
Video	1280 x 720 (HD) at 30 fps
Infrared camera resolution:	
Still image	0.23 megapixel
Video	640 x 360 at 30 fps
Diagonal viewing angle:	
Camera	75.8 degrees
Infrared camera	75.8 degrees

# **Touchpad**

The following table lists the touchpad specifications of your Alienware m15 R7.

Table 13. Touchpad specifications

Description		Values	
Touchpad res	solution:		
	Horizontal	1217	
Vertical		681	
Touchpad di	mensions:		
	Horizontal	105 mm (4.13 in.)	
	Vertical	60 mm (2.36 in.)	
Touchpad ge	estures	For more information about touchpad gestures available on Windows, see the Microsoft knowledge base article at support.microsoft.com.	

# Power adapter

The following table lists the power adapter specifications of your Alienware m15 R7.

Table 14. Power adapter specifications

Option one	Option two
180 W AC adapter	240 W AC adapter
•	
7.40 mm	7.40 mm
5.10 mm	5.10 mm
100 VAC-240 VAC	100 VAC-240 VAC
50 Hz-60 Hz	50 Hz-60 Hz
2.34 A	3.50 A
9.23 A	12.31 A
19.50 VDC	19.50 VDC
0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)
	7.40 mm 5.10 mm 100 VAC-240 VAC 50 Hz-60 Hz 2.34 A 9.23 A 19.50 VDC  0°C to 40°C (32°F to 104°F)

CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

### **Battery**

The following table lists the battery specifications of your Alienware m15 R7.

Table 15. Battery specifications

	Option one	Option two	
	3-cell "smart" lithium-ion (56 Wh)	6-cell "smart" lithium-ion (86 Wh)	
	13.20 VDC	<ul><li>13.20 VDC</li><li>13.35 VDC</li></ul>	
n)	0.26 kg (0.57 lb)	0.34 kg (0.75 lb)	
		-	
Height	77.70 mm (3.06 in.)	77.70 mm (3.06 in.)	
Width	295.20 mm (11.62 in.)	295.20 mm (11.62 in.)	
Depth	7.56 mm (0.30 in.)	7.56 mm (0.30 in.)	
		-	
Operating	0°C to 70°C (32°F to 158°F)	0°C to 70°C (32°F to 158°F)	
	Height Width Depth	3-cell "smart" lithium-ion (56 Wh)  13.20 VDC  n)  0.26 kg (0.57 lb)  Height  77.70 mm (3.06 in.)  Width  295.20 mm (11.62 in.)  Depth  7.56 mm (0.30 in.)	

Table 15. Battery specifications (continued)

Description		Option one Option two		
	Storage	-20°C to 65°C (-4°F to 149°F)	-20°C to 65°C (-4°F to 149°F)	
Battery operating time		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	
Battery charging time (approximate)  (i) NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, Me and My Dell on www.dell.com.		<ul> <li>Standard charging: 3 hours, when computer is turned off</li> <li>ExpressCharge: 2 hours, when computer is turned off</li> </ul>	<ul> <li>Standard charging: 3 hours, when computer is turned off</li> <li>ExpressCharge: 2 hours, when computer is turned off</li> </ul>	
Coin-cell battery		None	None	

CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

# **Display**

The following table lists the display specifications of your Alienware m15 R7.

Table 16. Display specifications

Description	Option one	Option two	Option three
Display type	15.6-inch, Full High Definition (FHD)	15.6-inch, Full High Definition (FHD)	15.6-inch, Quad High Definition (QHD)
Display-panel technology	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)	Wide Viewing Angle (WVA)
Display-panel dimensions (active area):			
Height	193.59 mm (7.62 in.)	193.59 mm (7.62 in.)	193.62 mm (7.62 in.)
Width	344.16 mm (13.55 in.)	344.16 mm (13.55 in.)	344.22 mm (13.55 in.)
Diagonal	394.87 mm (15.55 in.)	394.87 mm (15.55 in.)	394.94 mm (15.55 in.)
Display-panel native resolution	1920 x 1080	1920 x 1080	2560 x 1440
Luminance (typical)	300 nits	300 nits	400 nits
Megapixels	2.07	2.07	3.69
Color gamut	sRGB 100% (typical)	sRGB 100% (typical)	DCI-P3 99% (typical)
Pixels Per Inch (PPI)	141	141	188.30
Contrast ratio (typ)	1000:1	1000:1	1000:1
Response time (max)	<ul><li>With Overdrive: 3 ms</li><li>Without Overdrive: 8 ms</li></ul>	<ul><li>With Overdrive: 1 ms</li><li>Without Overdrive: 3 ms</li></ul>	<ul><li>With Overdrive: 2 ms</li><li>Without Overdrive: 6 ms</li></ul>

Table 16. Display specifications (continued)

Description	Option one	Option two	Option three
Refresh rate	165 Hz	360 Hz	240 Hz
Horizontal view angle	+/- 85 degrees	+/- 85 degrees	+/- 85 degrees
Vertical view angle	+/- 85 degrees	+/- 85 degrees	+/- 85 degrees
Pixel pitch	0.18 mm	0.18 mm	0.13 mm
Power consumption (maximum)	6 W	7.60 W	8.55 W
Anti-glare vs glossy finish	Anti-glare	Anti-glare	Anti-glare
Touch options	No	No	No
Adaptive sync support	G-SYNC, FreeSync, Advanced Optimus	G-SYNC, FreeSync, Advanced Optimus	G-SYNC, FreeSync, Advanced Optimus

# **GPU—Integrated**

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Alienware m15 R7.

### Table 17. GPU—Integrated

Controller	Memory size	Processor	
Intel UHD Graphics	Shared system memory	12 <sup>th</sup> Generation Intel Core i7-12700H	

### **GPU** — Discrete

The following table lists the specifications of the discrete graphics processing unit (GPU) supported by your Alienware m15 R7.

Table 18. GPU — Discrete

Controller	External display support	Memory size	Memory type
NVIDIA GeForce RTX 3050 Ti	One HDMI 2.1 port	4 GB	GDDR6
NVIDIA GeForce RTX 3060	One HDMI 2.1 port	6 GB	GDDR6
NVIDIA GeForce RTX 3070 Ti	One HDMI 2.1 port	8 GB	GDDR6
NVIDIA GeForce RTX 3080	One HDMI 2.1 port	16 GB	GDDR6
NVIDIA GeForce RTX 3080 Ti	One HDMI 2.1 port	16 GB	GDDR6

# Operating and storage environment

This table lists the operating and storage specifications of your Alienware m15 R7.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 19. Computer environment

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10000 ft)	-15.2 m to 10668 m (-49.87 ft to 35000 ft)

CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

<sup>\*</sup> Measured using a random vibration spectrum that simulates user environment.

<sup>†</sup> Measured using a 2 ms half-sine pulse.

# Keyboard shortcuts of Alienware m15 R7

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys that are used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press **2**, **2** is typed out; if you press **Shift + 2**, @ is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing F1 mutes the audio (refer to the table below).

However, if the function keys F1-F12 are needed for specific software applications, multi-media functionality can be disabled by pressing  $\mathbf{fn} + \mathbf{Esc.}$  Subsequently, multi-media control can be invoked by pressing  $\mathbf{fn}$  and the respective function key. For example, mute audio by pressing  $\mathbf{fn} + \mathbf{F1}$ .

NOTE: You can also define the primary behavior of the function keys (F1-F12) by changing **Function Key Behavior** in BIOS setup program.

#### Table 20. List of keyboard shortcuts

Keys	Description
FN + Fl	Disable/enable Full Speed Mode
FN + F7. 上	Adjust keyboard backlight brightness
FN + F8	Switch to external display
FN + F9 *	Launch the Windows Connect app to display Bluetooth devices
FN + FIO	Decrease display brightness
FN + FII*	Increase display brightness
FN + F12	Disable/enable touchpad

Your computer comes with pre-programmable macro keys that enable you to perform multiple actions with a single key press.

#### Table 21. List of Macro keys

Keys	Description
F2 F	
F3 E	Macro keys  (i) NOTE: You can configure modes and assign multiple tasks for the macro keys on the keyboard.
F4 =	
F5_	
F6 ■	

Your computer comes with dedicated keys that enable you to control audio features of the computer with a single key press.

Table 22. List of keys to control audio features

Keys	Description
©× )	Mute microphone
	Mute speakers
	Increase volume
	Decrease volume

### Low blue light

WARNING: Prolonged exposure to blue light from the display may lead to long-term effects such as eye strain, eye fatigue, or damage to the eyes.

Blue light is a color in the light spectrum which has a short wavelength and high energy. Chronic exposure to blue light, particularly from digital sources, may disrupt sleep patterns and cause long-term effects such as eye strain, eye fatigue, or damage to the eyes.

The display on this computer is designed to minimize blue light and complies with TÜV Rheinland's requirement for low blue light displays.

Low blue light mode is enabled at the factory, so no further configuration is necessary.

To reduce the risk of eye strain, it is also recommended that you:

- Position the display at a comfortable viewing distance between 20 and 28 inches (50 and 70 cm) from your eyes.
- Blink frequently to moisten your eyes, wet your eyes with water, or apply suitable eye drops.
- Look away from your display, and gaze at a distant object at 20 ft (609.60 cm) away for at least 20 seconds during each break.
- Take an extended break for 20 minutes every two hours.

### **Alienware Command Center**

Alienware Command Center (AWCC) provides a single interface to customize and enhance the gaming experience. The AWCC dashboard displays most recently played or added games, and provides game-specific information, themes, profiles, and access to computer settings. You can quickly access settings such as game-specific profiles and themes, lighting, macros, and audio that are critical to the gaming experience.

AWCC also supports AlienFX 2.0. AlienFX enables you to create, assign, and share game-specific lighting maps to enhance the gaming experience. It also enables you to create your own individual lighting effects and apply them to the computer or attached peripherals. AWCC embeds Peripheral Controls to ensure a unified experience and the ability to link these settings to your computer or game.

This computer features the following AlienFX Lighting Zones:

- keyboard
- AlienHead power button
- AlienHead LED on the back of the display
- (i) **NOTE:** AlienFX lighting supports up to 16.8 million distinct colours.
- (i) NOTE: Information about the location of AlienFX Lighting Zones on your computer is available in AWCC.

AWCC supports the following features:

- FX: Create and manage the AlienFX zones.
- Fusion: Includes the ability to adjust game-specific Power Management, Sound Management, and Thermal Management features.
- Peripheral Management: Enables peripherals to appear in and be managed in Alienware Command Center. Supports key
  peripheral settings and associates with other functions such as profiles, macros, AlienFX, and game library.

AWCC also supports Sound Management, Thermal Controls, CPU, GPU, Memory (RAM) monitoring. For more information about AWCC, see the *Alienware Command Center Online Help* or search in the Knowledge Base Resource at <a href="https://www.dell.com/support">www.dell.com/support</a>.

# Getting help and contacting Alienware

# Self-help resources

You can get information and help on Alienware products and services using these online self-help resources:

Table 23. Alienware products and online self-help resources

Self-help resources	Resource location
Information about Alienware products and services	www.alienware.com
My Dell app	Dell
Tips	
Contact Support	In Windows search, type <b>Contact Support</b> , and press <b>Enter</b> .
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Alienware computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at <a href="https://www.dell.com/support">www.dell.com/support</a> . For more information on how to find the Service Tag for your computer, see <a href="https://www.dell.com/support">Locate the Service Tag on your computer</a> .
Videos providing step-by-step instructions to service your computer	www.youtube.com/alienwareservices

# Contacting Alienware

To contact Alienware for sales, technical support, or customer service issues, see <a href="https://www.alienware.com">www.alienware.com</a>.

- (i) NOTE: Availability varies by country/region and product, and some services may not be available in your country/region.
- (i) NOTE: If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.